

Mobile Platform Scale

Model **SRV710W** / **SRV740W**

These app-enabled mobile platform scales make gathering weight for lions, tigers, bears, and other large animals both easy and safe whether being weighed in their habitat or holding cage.

The scales' durable stainless frames are coated with an aggregate infused polyurea coating that provides a slip-free surface for animals, reducing the fear of slipping that animals often associate with a scale.

The scales incorporate hermetically sealed load cells and built-in displays allowing for complete wash down of the scales.



WIRELESS

The scale's electronics are equipped with Bluetooth wireless communication, enabling the animal keeper to operate the scale at a safe distance using a Bluetooth equipped android tablet or phone.

LARGE WEIGHING SURFACE

The scales' large 36" x 54" (SRV710W) and 30" x 40" (SRV740W) anti-skid surfaces are ideal for gathering weight on large hoofstock or turtles.

CAPACITY

2,000 Lbs. or 907 Kgs.

PORTABLE

Two people can easily carry the scales to where the animals are being weighed. Simply place on a hard flat surface.

POWER

Six "AA" batteries provide up to 800 weigh cycles.



Mobile Platform Scale

Model SRV710W / SRV740W

SR Scales®

by SR Instruments, Inc.


Quality. Reliability. Accuracy.

SYSTEM SPECIFICATIONS



MAX WEIGHT	2,000 Lb / 907 Kg
DISPLAY RESOLUTION	.2 Lb / .1 kg
BUTTON FUNCTIONS	Zero/Weigh, lb/kg, Hold/Recall
DISPLAY UNITS	Pounds / Kilograms
PORTABILITY	Two people can easily move scale to point of use.
POWER	Six (6) "AA" Batteries
HELD WEIGHT *TABLET ONLY*	Highest stable weight is automatically stored in memory. Press "HELD Wt" on the tablet to recall the last stored weight
AUTO POWER DOWN	Approximately five (5) minutes from last button press. (including tablet operation)
SCALE WEIGHT	140 Lbs.
WARRANTY	Two (2) Years



DIMENSIONS in [cm]

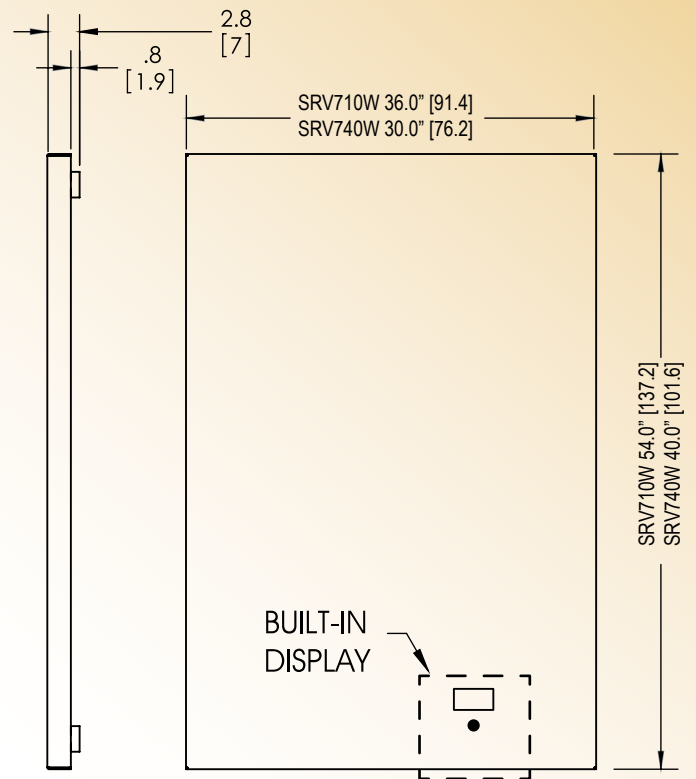

PACKAGING

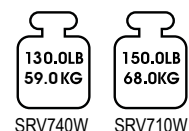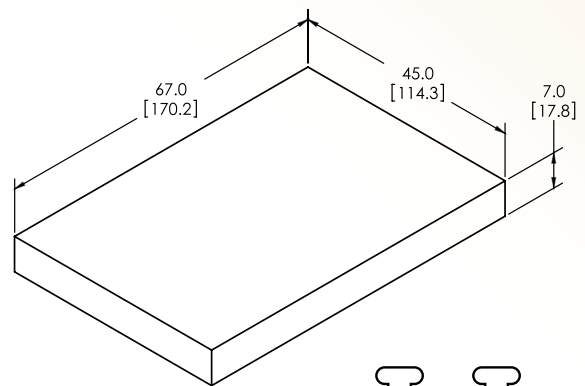

Specifications subject to change without notice.

SR Instruments, Inc.

600 Young Street, Tonawanda, New York 14150 USA
 T: 716.693.5977 • F: 716.693.5854 • TF: 1.800.654.6360

www.srscales.com

email: info-request@srinstruments.com