

# Mobile Platform Scale

## Model SRV715

This app-enabled mobile platform scale makes gathering weight for large hoofstock both easy and safe for both animals and keepers.

The SRV715 is constructed from light-weight yet durable aluminum with a high density anti-slip plastic surface. The extra large weighing platform consist of a transducer frame and a separate surface plate which can be assembled in less than one minute without tools.

The SRV715 is constructed using hermetically sealed load cells allowing for complete wash down of the scale for cleaning.

### WIRELESS

The scale electronics are equipped with wireless communication enabling the animal keeper to operate the scale at a safe distance using an android tablet or phone.

### EXTRA LARGE WEIGHING SURFACE

The scale's large 48" x 72" anti-skid surface makes it ideal for gathering weight on large animals.

### CAPACITY


4,000 Lbs. or 1,820 Kgs.

### PORTABLE

The unique 2 piece design makes the scale lightweight allowing for portability between exhibits as well as being keeper friendly.

### POWER

Six "AA" batteries.

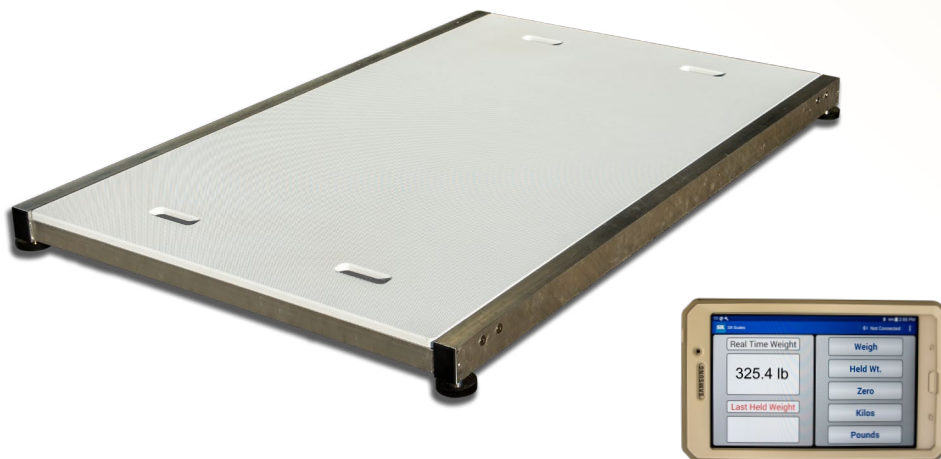

# Mobile Platform Scale

## Model SRV715



**SR Scales**<sup>®</sup>  
by SR Instruments, Inc.

Quality. Reliability. Accuracy.


### SYSTEM SPECIFICATIONS

<b>MAX WEIGHT</b>	4,000 Lb / 1,820 Kg
<b>DISPLAY RESOLUTION</b>	1 Lb / .5 kg
<b>BUTTON FUNCTIONS</b>	Zero/Weigh, lb/kg, Hold/Recall
<b>DISPLAY UNITS</b>	Pounds / Kilograms
<b>PORTABILITY</b>	Scale disassembles for easy transport.
<b>POWER</b>	Six (6) "AA" Batteries
<b>HELD WEIGHT</b>	Highest stable weight is automatically stored in memory. Press HELD Wt to recall last stored weight.
<b>AUTO POWER DOWN</b>	Approximately five (5) minutes from last button press.
<b>SCALE WEIGHT</b>	Top Panel 84 Lbs. Transducer 115 Lbs.
<b>WARRANTY</b>	Two (2) Years

### DIMENSIONS in [cm]

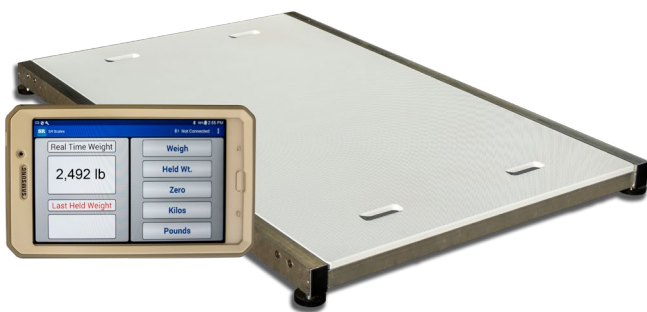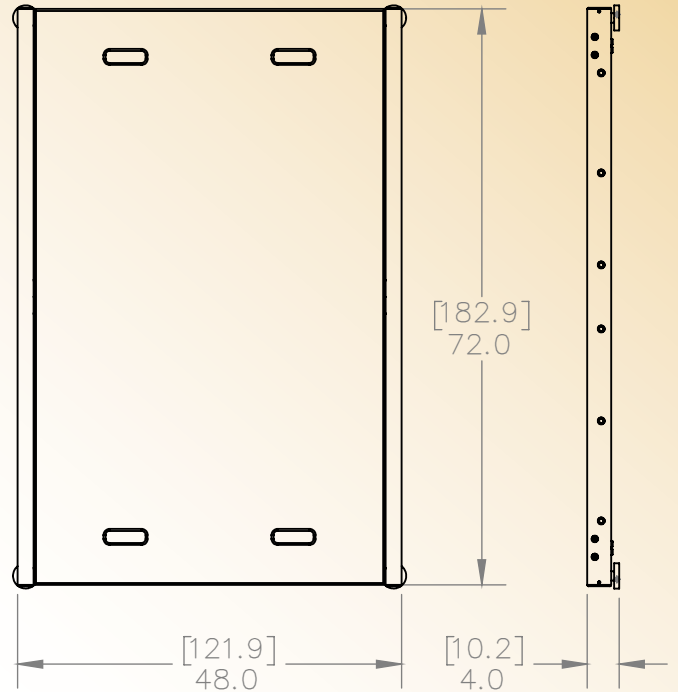

### PACKAGING

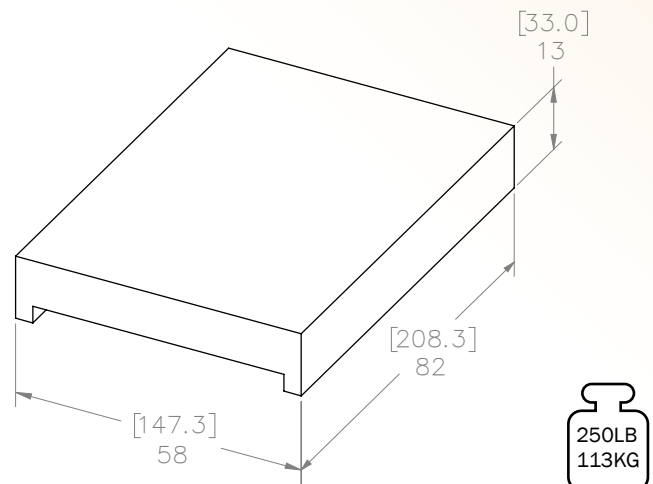

Specifications subject to change without notice.

SR Instruments, Inc.

600 Young Street, Tonawanda, New York 14150 USA  
T: 716.693.5977 • F: 716.693.5854 • TF: 1.800.654.6360

[www.srscales.com](http://www.srscales.com)

email: [info-request@srinstruments.com](mailto:info-request@srinstruments.com)